Portable Monitor Quick Instructions

Note:Please use the original cable,otherwise it will easily cause a black screen or a flickering screen.

1.How to open OSD menu & adjusting brightness and volume

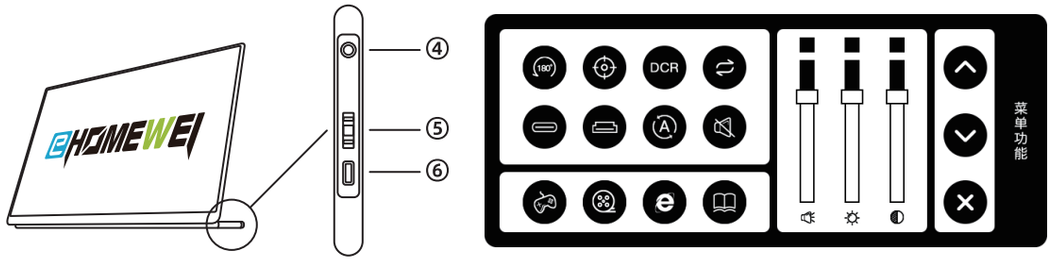

⑥ Power/OSD Menu Button : Short press to open the OSD Menu.

⑤ Signal Switch Button : Short press for signal choice. Scroll up/down to adjusting brightness & volume.

: up page	: Down page	: Exit menu	: Brightness	: Contrast ratio
: Game mode	: Volume	: Restore default	: Movie mode	: Mute
DCR: Libby Technology	: Web page mode	: Quasi Center	: Rotate 180°	: Reading mode
: Type-C Signal	: Mini HDMI Signal	: Automatic input signal		

Note 1: (Quasi Center)game quasi heart assistance(the geme needs to be started);

Note 2: (LibbyTechnology)brightness / contrast is locked after setting;

Note 3: When the OSD menu is opened,the touch of other interfaces cannot be used.After the munu bar disappears,the touch of other interfaces is restored;

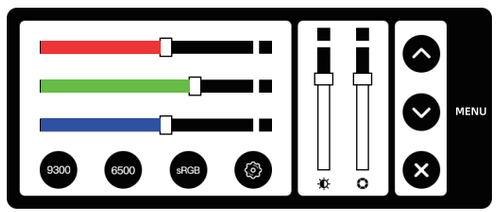

Note 1: “9300, 6500, sRGB” is set to three primary colors, with fixed parameter values of red, green and blue;

Note 2: : three promary colors can be customized;
: Hue; : Saturation;

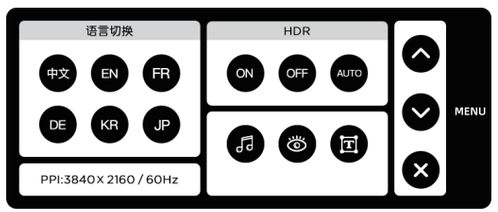

中文 : Chinese	EN : English
JP : Japanese	FR : French
AUTO: Automatic	ON : Open
: 3D music	: Sharp mode
KR : Korean	DE : German
OFF : Closure	: Eye protection mode

2.Connect laptop / computer via USB-C port

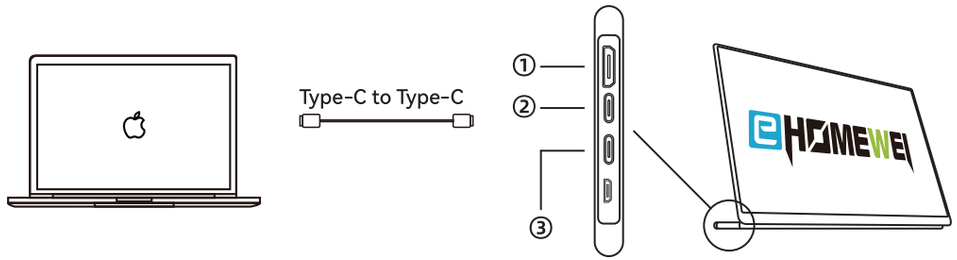

If the power supply of the USB interfacec of the computer is insufficent, please connect to an extternal power source with 5V/3A or above

Simply use the provided Type-C to Type-C cable to connect between EHOMEWEI ② to your laptop/computer, If your device have Thunderbolt 3/4 or USB3.1 Type-C or above interface.

Note 1: Make sure the Type-C interface of your laptop is not only a charging port.

Note 2: With touch function of Macbook, You need to move the mouse pointer to EHOMEWEI screen.

Note 3: If your Macbook can not adjust the resolution,or the fonts appear blurry after adjusting the resolution,you need to enable HiDPI. If you still have technical problems,please contact us for support.

3.Connect laptop/PC via HDMI port

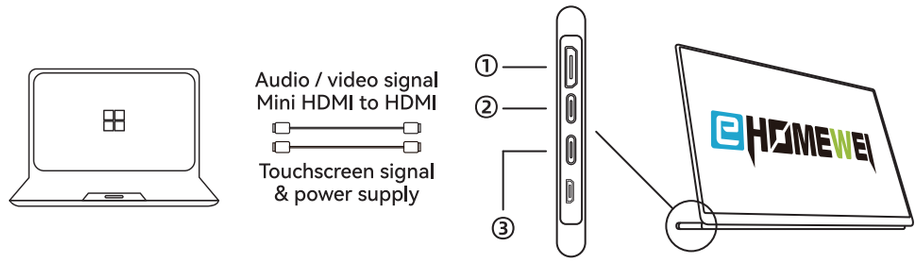

If the power supply of the USB interfacec of the computer is insufficent, please connect to an extternal power source with 5V/3A or above

Note 1: HDMI Cable only for audio/video signal, if you want touch screen, please add up USB-A to USB-C cable.

Note 2: If you can not use touch, you need to set up in control panel of laptop/PC.

Note 3: If you do not know how to set up, please contact EHOMEWEI technical support for it.

4.Cinnect your smaart phone with TV-out function via USB-C port.

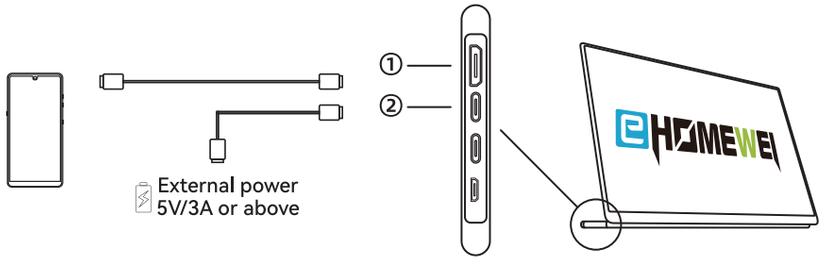

Note 1: Please provide power to the monitor with a power source of 9v/2A or above to support Samuung Dex or EMULDesktop function.

Note 2: The Ehomewei monitor will be able to charge your smartphone when the monitor is connected to a external power supply.Otherwise, your smartphone battery will be used as a power source to charge the Ehomewei monitor.

Note 3: If the monitor is used without an external power source,unexpected turn off or restart may occur due to undervoltge. To ensure a sufficient working current for both the monitor and your devices,it's suggested to use a charger / power bank of 18W+.4K models may need 20W+.

5.Connect to a Nintendo Switch via USB-C port.

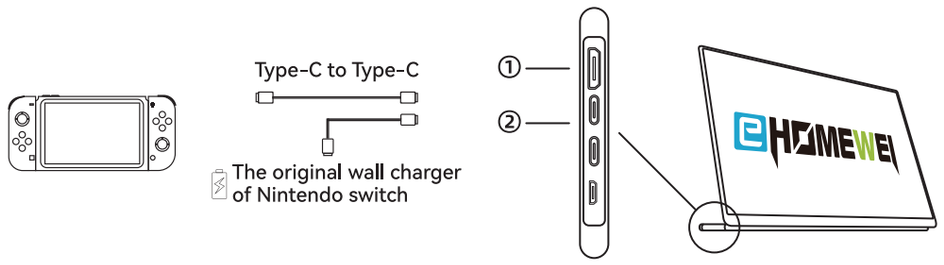

Note 1: Please provide power to the Ehomewei monitor with the original charger / dock that goes with your Nintendo switch.

Note 2: Nintendo Switch / PS4 or other game consoles do not support the touch screen function.

6.Connect to a TV box, PS3/4/5, XBOX gaming console.

Note 1: The monitor can run either via external power or the power source of an HDMI device through its USB port if the USB port has enough wattage.

Note 2: If the power supply of an HDMI device is insufficient, please connect to an external power source with 5V / 3A or above.

Note 3: When connecting the monitor to an HDMI interface, please connect power supply first and then connect the HDMI cable to ensure the smooth signal transmission.

EHOMEWEI Monitor gestures on Mac OS

1.Tap to click

Tap with one finger to click.

2.Scroll

Slide two fingers up or down to scroll.

3.Zoom in or out

Pinch with two fingers to zoom in or out.

4.click with one finger(right-click)

Click the right side of the screen

5.Mission Control

Swipe up with four fingers
to open Mission Control.

6.App Exposé

Swipe down with four fingers to see all windows of the app you're using.

7.Swipe between full-screen apps

Swipe left or right with four fingers to move between desktops and full-screen apps.

8.Launchpad
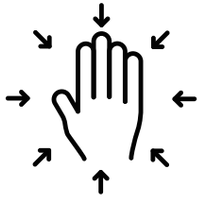
Pinch the screen with 5 fingers
to display Launchpad.